

Cleaning Rust-like Spots on the Inside of the Thermal casing

- Dilute 1 tablespoon (approx. 10g) of citric acid in warm water and pour into the thermal casing.
- Let it soak for 2 to 3 hours, and then clean with a sponge and rinse abundantly with the water.
- Wipe the inside of the container with a dry cloth and allow to dry thoroughly.

As a substitute:

Use 1/2 cup of white vinegar instead of citric acid.

Replacing and Purchasing Consumable Parts

The gaskets for the rice and side dish containers are consumable parts. Check once every 6 months to 1 year for damage/deterioration. If heavily stained or loose, replace them. (with 2 leak proof gaskets for replacement)

For replacements, contact the shop where you purchased this product.

Inquiries

Tiger Corporation manages product quality very carefully, however, should trouble occur with this product, contact the shop where you purchased, providing them with the following information.

- 1.Product name
- 2.Model Number
- 3.Description of trouble
(As detailed as possible)

Feel free to send any questions or comments about this product to the shop where you purchased it.

Specifications

Materials

Inner flask		Stainless steel
Thermal casing	Outer container	Stainless steel (with acrylic coating)
Rice container, Side dish container, Side dish container lid		Polypropylene
Rice container lid		Polypropylene (Internal: Polystyrene foam)
Gasket		Silicon

Maximum/Minimum temperature tolerance of inner Container

Rice container, Side dish container	140°C	-20°C
	284°F	-4°F
Rice container lid	90°C	-20°C
	194°F	-4°F
Side dish container lid	125°C	-20°C
	257°F	-4°F

*The polypropylene resin from the containers is hygienically tested approved.

*For the purpose of performance improvement, designs, specifications and parts shown in this publication are subject to change without notice.



MODEL

LWV-C050
LWV-C075

 
Household Use Only

Thermal Lunch Box

With Bag

Instructions

Thank you for purchasing a "TIGER" Thermal Lunch Box. Please read the instructions completely before use. Keep these instructions for future reference.

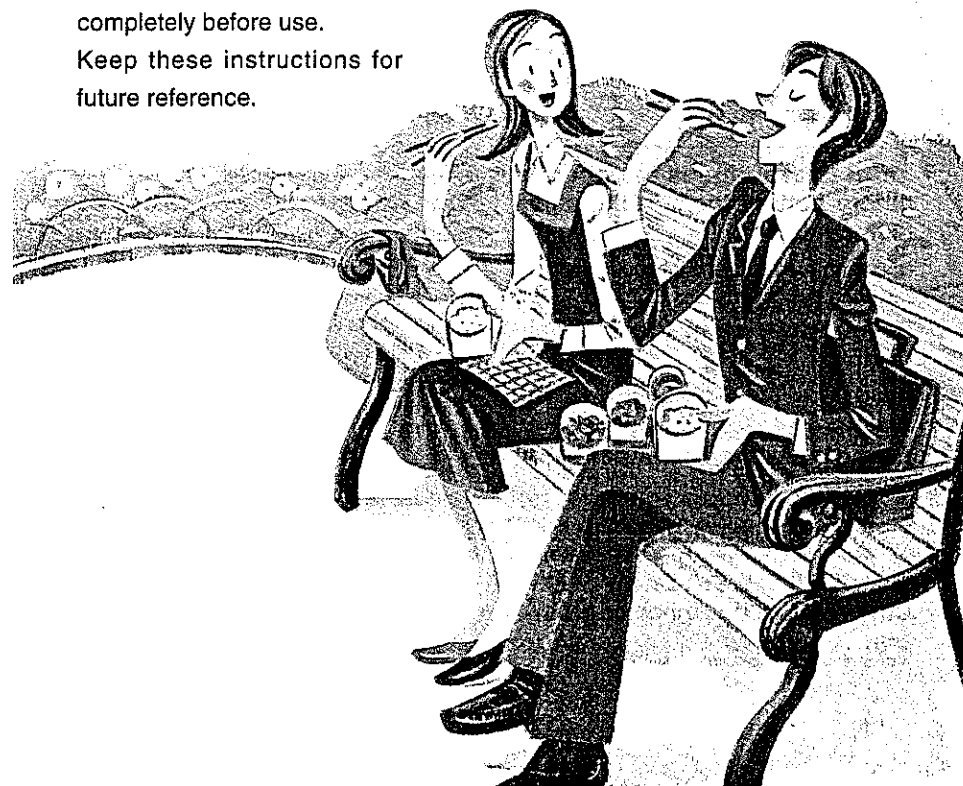


TIGER CORPORATION

Head Office:3-1 Hayamicho, Kadoma-City, Osaka, 571-8571 Japan

Safety Precautions

 Keep out of reach of children.

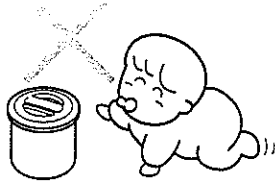

Keep away from cooking ranges, heaters and flames.

Heat can burn, bend and discolor the product.

Do not put raw meat / fish or dairy products in the inner containers.

Such foods spoil easily.

Allow cooked foods to cool off before putting them in the side dish container.

Not doing so may cause the food to spoil.

Do not put rice in the thermal casing.

Doing so may cause rusting.

Do not use the containers for storing soups.

Soups and other liquids may leak.

Do not store anything other than food in the inner containers.

Do not use the lunch box for any purpose other than keeping food warm or cold.

Do not store food for more than 6 hours.

 
Prolonged storage may cause the food to spoil.

Do not heat the thermal casing in a microwave.

Electric sparks and other malfunctions may occur and cause injuries.

Do not lay the lunch box on its side.

Doing so may cause contents to leak.

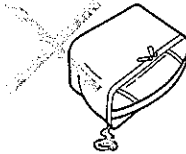

Do not knock over, drop, or subject the lunch box to strong shocks.

Doing so may cause burns, deformation, rust, and peeling of the coating, or leaking of contents.

 
Do not swing the lunch box.

Doing so may cause injuries or damage to people and objects.


How to Use

1 Remove the rice container from the thermal casing.

• Hold the rice container, and remove as illustrated.

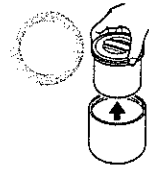

 • Do not hold the container by the lid when removing. (The container may drop off.)

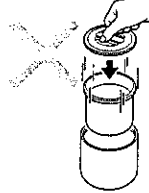


• Make sure that the gaskets for the rice and side dish containers are attached. →P.5


When Using for the First Time

Wash the containers, and lids. →P.5

 [Names of Parts]

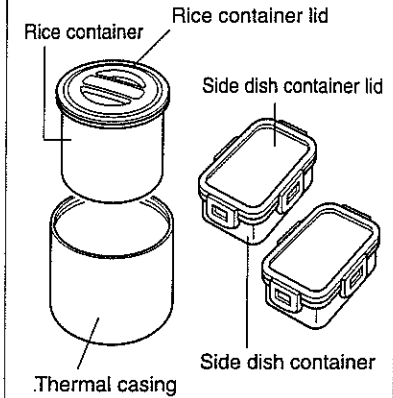


 (The spare gaskets are included for replacement. →P.6)

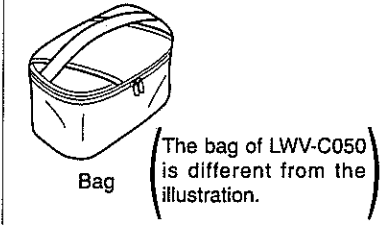


2 Fill the thermal casing and rice container half-way with hot water, and allow them to preheat for 1 to 2 minutes.

 • After preheating, pour out the hot water, and wipe the casing and container dry. Be careful of burns.
• Do not warm up the side dish container.

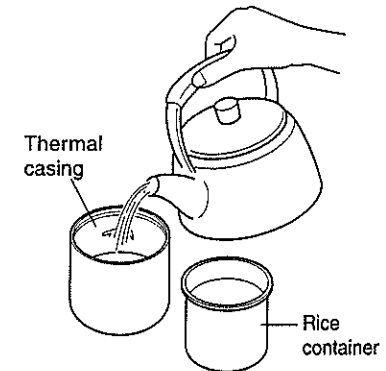

3 Put hot rice in the rice container, and put the container in the thermal casing.

 Do not put any other foods such as soups in the rice container.

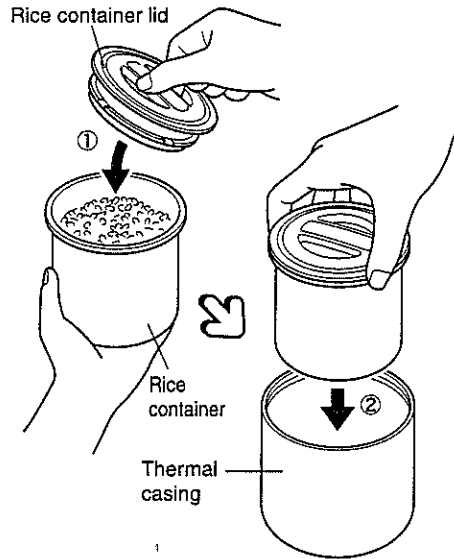


4 Put the side dish in the side dish container.

- Allow cooked foods to cool off before putting them into the container.
- Wrap strong smelling, vinegary, or oily foods and foods with coloring such as spinach and pickled radish in plastic wrap.

Note

 - Bending or closing the fasteners forcefully may cause them to break.

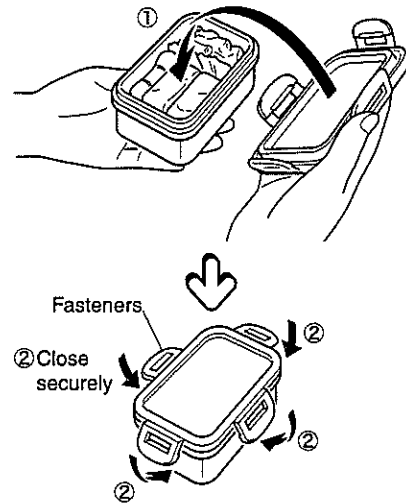


3

5 Put the rice and side dish containers into the bag.

- Do not put the containers into the case wet or upside down.
- Cover the rice container with the insulation cover.

Note

 
- Do not put the side dish containers into the larger space. Doing so may cause the side dishes to spoil, or cause a reduction in the thermal effects of the rice container.

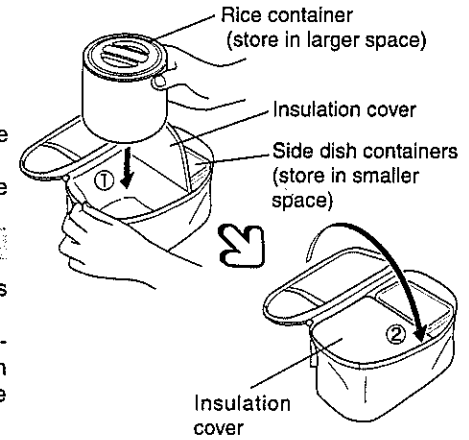

6 Close the bag.

Note

 - When carrying the bag, be sure to zip up the bag to prevent the contents from falling out.

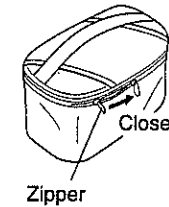

4

Microwaving

Detach the lids from the inner containers before microwaving.

Caution

 
 
 
- Do not heat with the lids attached.
- Do not heat the thermal casing in a microwave.
- Do not heat the empty rice and side dish containers.
- Do not heat oily or sugary foods for long periods of time.
- Do not use the grill or oven mode of combination microwave ovens. (If other foods were heated using these modes, allow the microwave to cool off before heating the containers.)

How to Clean

- ◆ Clean after every use.
- ◆ Use synthetic kitchen detergent (for plates and cooking utensils).
- ◆ Use a sponge or soft cloth.

- **Rice container** 1. Wash in warm water with a sponge and detergent, and rinse.
- **Rice container lid** 2. Wipe off water with a dry cloth, and allow each piece to dry thoroughly.
- **Rice container gasket**
- **Side dish container**
- **Side dish container lid**
- **Side dish container gasket**
- **Thermal casing**


- **Bag** Wipe with a cloth dampened with warm water and thoroughly wrung out. (Do not wash.)

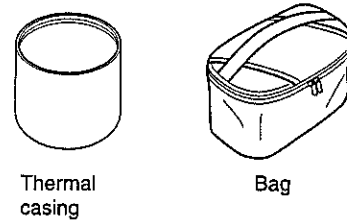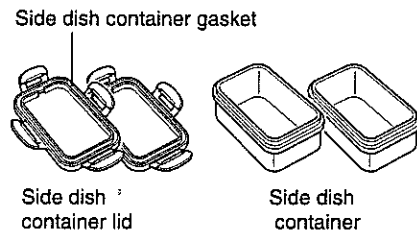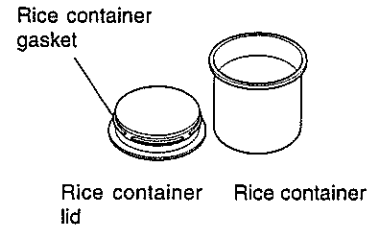

Removing and Attaching the Gasket - Side Dish Containers


To Remove

 Fit the end of a soft pointed rod (toothpick, etc.) into the groove and pull out the gasket. (Do not use metal skewers, etc.)

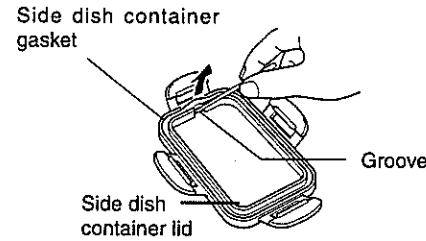


To Attach

 Press securely into the groove.

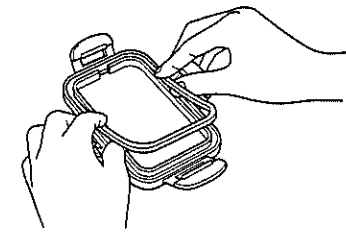

 Removing and Attaching the Gasket - Rice Container

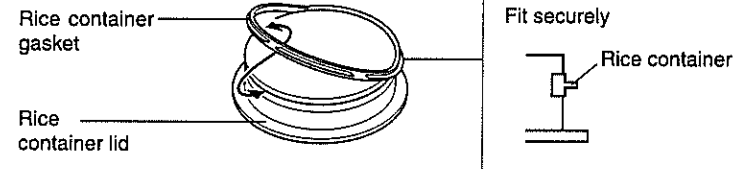

Caution:

- Do not use harsh / abrasive materials such as thinner, bleach, chemical cleaners, steel wool, and other hard brushes.
- Do not use dishwashers / dishdryers or boiling water.
- Be sure to attach the gaskets for the side dish and rice containers. →P.6
- Wash and dry each part thoroughly before storing for long periods without use.